


Intercom Control Panel

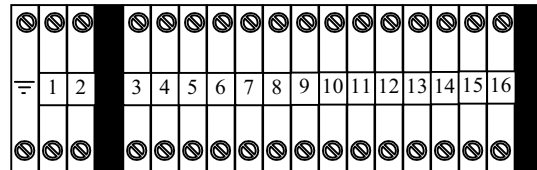


N L
230V ~
50/60 Hz

Receiver /
Transmitter

To start
command for
gate

Receiver/Transmitter Connections

- 11. Yellow
- 12. Green
- 13. Red
- 14. Black
- 15. White
- 16. Blue

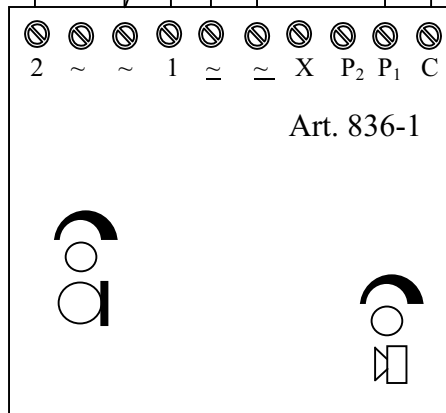

Intercom Gate Station