


## Intercom Control Panel

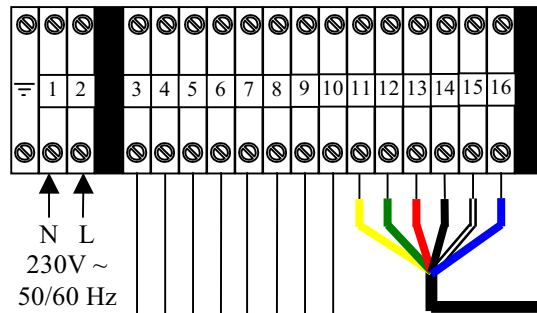


**Receiver /  
Transmitter**

### Receiver/Transmitter Connections

- 11. Yellow
- 12. Green
- 13. Red
- 14. Black
- 15. White
- 16. Blue

**To start  
command for  
gate**

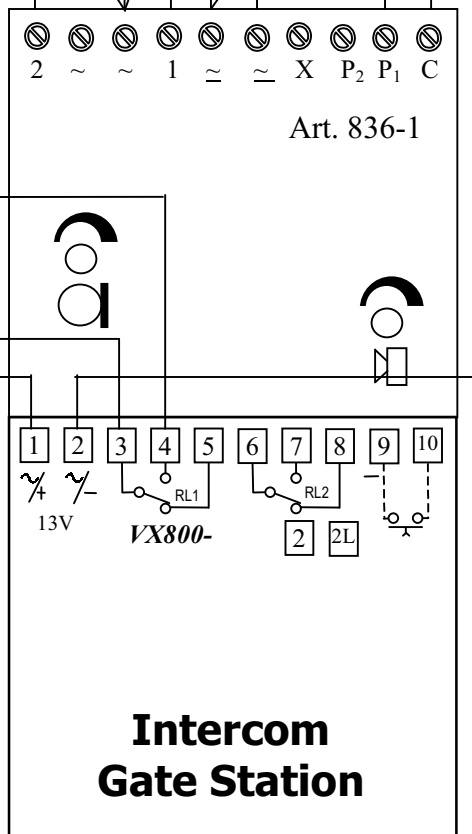

**Intercom  
Gate Station**